



### 1. Front Body (Front Body, installation on the outside of the door)

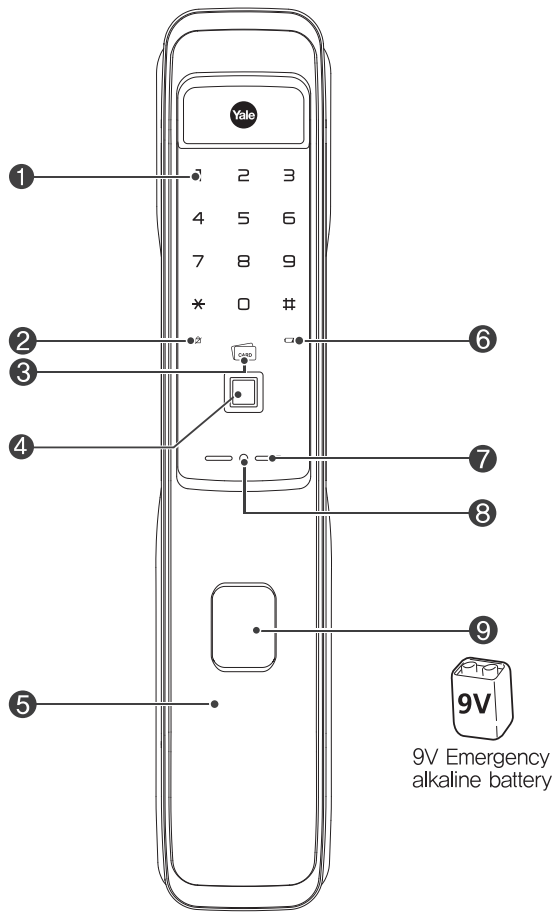


### 4. Main Body (Main Body, installation on the inside of the door)

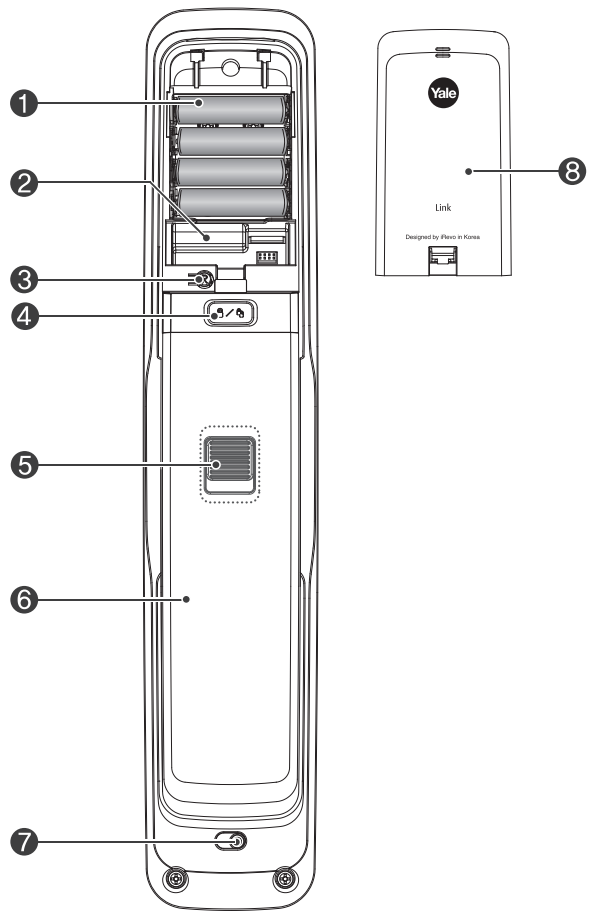


### 2. Basic Contents


#### Basic Contents

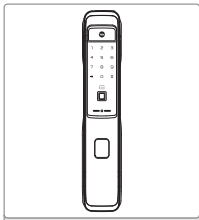


Front Body

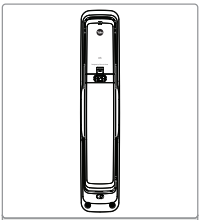

Main Body

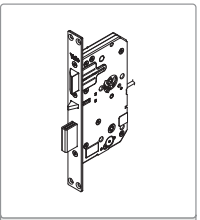

Lock Case

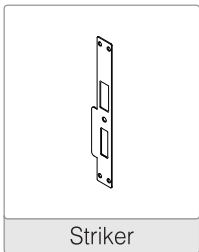

Striker

- User Guide
- Install Guide
- 4 AA Batteries
- 4 Card Keys
- 2 Mechanical Keys

#### Optional Accessories

- Remote Controller

### 3. Specifications

Parts	Specifications	Remarks
Front Body	71.4(D) X 77(W) X 397.4(H) mm	Rated Voltage Operating temperature Sensor operating temperature(High).
Main Body	78(D) X 77(W) X 396.7(H) mm	
Battery	4EA 1.5V AA Alkaline batteries(Available for 1 year under the assumption of 10 times use per day)	
Type of product	Direct current, Temperature Sensor, Not fire resistant, Key is not available, Deadbolt type door lock (D-F-T-NK-M).	

※ Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of the batteries.

### 7. Setting Menu

**Normal Mode:** Without a designated person, anyone who knows 'User PIN Code' has authority to set features.

**Master Code:** Only a designated person who knows 'Master PIN Code' has authority to set features.

**Visitor Code:** The visitor code is different from user code and given out to visitors only.

**Onetime Code:** The onetime code is used only once for unlocking the door lock and automatically deleted after usage.

**User Slot Number:** User Slot Number Should be 2 digits(like"01", "02" ...) When registering group of users in advanced mode, the User Slot Number is used to distinguish individuals and offer private pin codes.

	Touch the Keypad of the Front Body with your palm to begin.
	Press  button on the Keypad.
	Press  button on the Keypad.
	Press  (Registration) button in every steps to start or complete the session.
	Enter User Card Key.(Up to 40EA)
	Enter User Fingerprint.(Up to 40EA)
	Enter User Code.(4 ~ 10 digits)
	Enter Master Code.(4 ~ 10 digits)
	Enter Visitor Code.(Only 4 digits)
	Enter Onetime Code.(Only 4 digits)
	User Slot Number should be 2 digits.(like "01", "02" ...)
	Rotation area to add more features.

### 8. Product Features

#### 3minute Lock Out Feature

After five(5) unsuccessful attempts at entering a invalid code or Cardkey, 3 minute Lock out mode will be activated.

#### Fake PIN Code

Security enhancement to enter any number before or after entering a password. With this function, user can reduce the anxiety of exposing passwords.

#### Smart pad

Convenient function that shows the operation of the door lock with 12 numbers and symbols on the number plate. It expresses various situations such as door opening, closing, and typing on a number plate.

#### Mechanical Key

When there is a problem such as forgotten security code electronic malfunction, the lock can be operated with mechanical key. You can lock and open the door by opening the case lid and turning the key.

#### Safe Switch

To prevent from break-in and unexpected release of the door lock from inside.

#### Smart Etiquette

To enter pin codes on the keypad and open the door lock in silent mode.

#### Bluetooth

After pairing & registering a smart phone with YMI70 using Yale Link app, user could lock and unlock the door by using smart phone.

#### Network Module Setting (\*Optional)

This setting becomes available through the Main Menu (9) and allows the lock to connect with the Controllers.

### 9. Quick Menu (Normal Mode)

Without a designated person, anyone who knows 'User PIN Code' has authority to set features.

User Code Registration and Change												* Continue / ® Complete	
	1	2	3	4	5	6	7	8	9	10	11	12	
Registration	®	U PIN CODE New	®										
Card Key												Up to 40EA	
Registration	®	CARD	®										
Fingerprint												Up to 40EA	
Registration	®	*	👉 8Times	*	OR	®							
Visitor Code													
Registration						1	#	V PIN CODE	#	*	OR	®	
Delete						3	#	U PIN CODE	#	*	OR	®	
Onetime Code												Auto delete after using.	
Registration						1	#	0 PIN CODE	#	*	OR	®	
Delete						3	#	U PIN CODE	#	*	OR	®	
Delete All Fingerprint													
Delete						1	#	U PIN CODE	#	*	OR	®	
Delete All Card Key													
Delete						2	#	U PIN CODE	#	*	OR	®	
DoorLock Setting: Automatic lock setting													
Registration						1	#	*	OR	®			
Delete						3	#	*	OR	®			


DoorLock Setting: Change mode and Master PIN Code registration												
Change Mode			4	#	1	#		#				
DoorLock Setting: Language Setting												
Language Setting			4	#	5	#	1	Korean	#	*	OR	
							2	Chinese	#	*	OR	
							3	English	#	*	OR	
							4	Taiwanese	#	*	OR	
DoorLock Setting: Volume Control												
High							1	#	*	OR		
Low			4	#	3	#	2	#	*	OR		
Mute							3	#	*	OR		
DoorLock Setting: Bluetooth setting												
Registr-ation			8	#	1	#		#	*	OR		
Delete					3	#		#	*	OR		
Remote Control												
Registr-ation			8	#	8	#	1	#	SET Button	#	*	OR
Delete					3	#		#		#	*	OR
Controller												
Registr-ation			9	#	1	#	Cont roller	#	*	OR		
Delete					3	#		#	*	OR		



#### How to press remote control set button


: Press the set(registration) button located on the front of remote control. You can press it using a pin like the picture.

### 10. Unlocking Door with Code

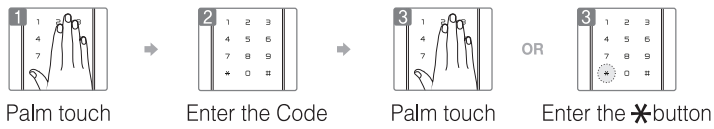


### 11. Unlocking Door with Fingerprint

※ At the top left of the fingerprint input box when the fingerprint recognition status lamp is turned on, please open the door after the light is turned off.

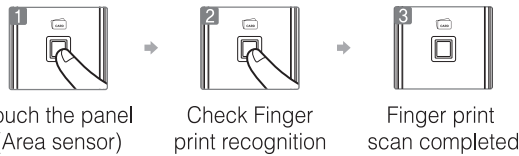

### 12. Unlocking the door from inside / outside

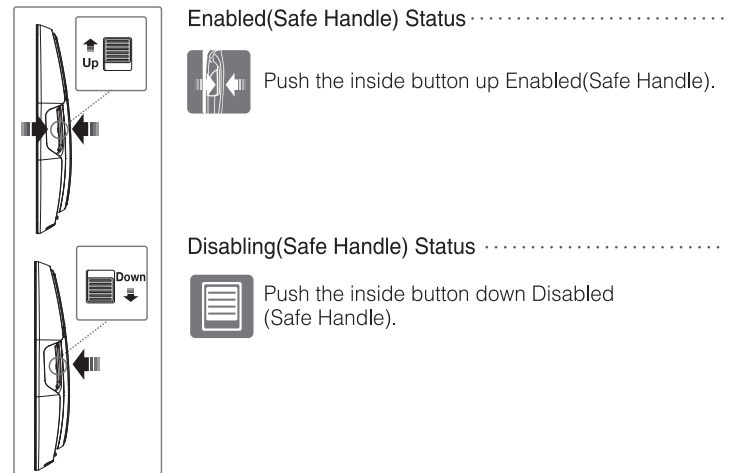

### 13. External Forced Lock

#### External Forced Lock Setting - Fingerprint

Swipe with registered Fingerprint and touch the Button for 5 seconds until you hear 3 beeps.

#### External Forced Lock Setting – User code

Swipe with registered Fingerprint and touch the Button for 5 sec. until you hear 3 beeps.

 
#### External Forced Lock Setting – card Key

Contact Card Key on [Card Key reader] for 5 sec. until you hear 3 beeps.


#### Releasing External Forced Lock Setting

When the door is unlocked from outside based upon proper authentication, the External forced lock will be released.

#### Internal Forced Lock




### 14. Unlocking Door with Smart Etiquette.

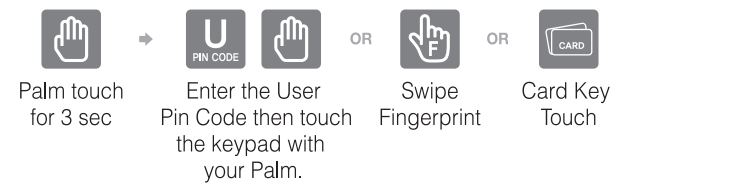

### 15. 3-minute Lock Out Feature

After five(5) unsuccessful attempts at entering a invalid code or Card Key, 3-minute Lock Out mode will be activated.

#### To Release 3-minute Lock Out

- 1 Open with inside door bar.
- 2 Open the door with mechanical key.
- 3 Press  button.


### 16. Alarm

#### Intrusion / Damage alarm


**Break in Alarm:** The alarm will be activated if someone forces to open the door when the door is locked.

**Damage Alarm:** The alarm will be activated if IN and/or OUT side of a door lock is physically damaged by any other forces.


#### To turn off Alarm

- 1 Enter the registered User Code.
- 2 Press the  button for 5 seconds.
- 3 Enter the registered Fingerprint.

### 17. Unlocking Door with Fake Code

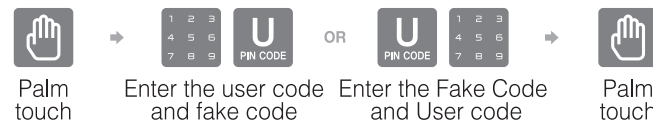

### 18. Power supply

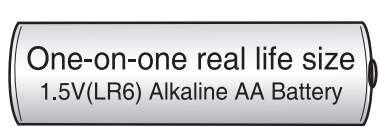

The product uses four 1.5V Alkaline AA batteries. They may sustain 1 year if used 10 times a day. (Users are advised to use authentic Alkaline batteries.)

You must replace all 4 batteries in the following cases:

- \* The Low Battery LED on keypad flickers red.
- \* When low battery notification message is played.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE NATIONAL CODE OR RECYCLING PROGRAM.


### 19. Emergency power supply for discharged batteries




### 20. Resetting Lock to Factory Default

When lock is reset to factory defaults all user codes (including the Master code\*)are deleted and all programming features are reset to original default settings(see below).

1. Remove the battery cover and batteries.
  2. Remove the interior escutcheon to access the reset pads.
  3. The reset pads are located on bottom of the PCB board (See image)
  4. While pressing the reset pads with tweezer, reinstall batteries and release reset pads with tweezer.
  5. The reset pads are located above of PCB cable connector
- Upon reset, Master code creation is the only option available and must be performed prior to any other programming of the lock.

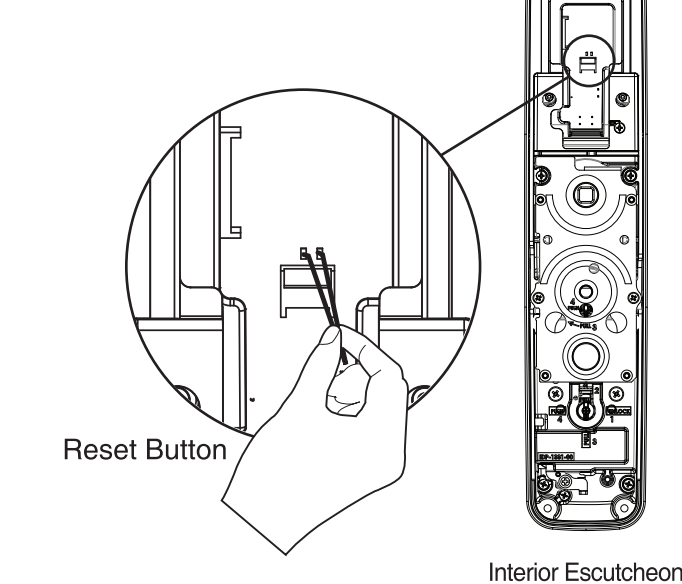

### 21. Z-Wave or Zigbee Module

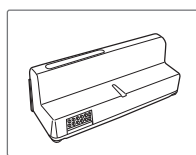

When the module is mounted, it can be used in conjunction with local controller. The batteries must be removed prior to insert the module.

#### Installation(module)


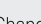


















































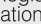







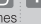



































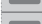









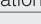



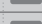














































- 1 Remove battery cover and batteries.
- 2 Insert Z-Wave or Zigbee Module.
- 3 Reinstall batteries checking -, + terminal.
- 4 Check Z-Wave or Zigbee Module is correctly mounted with the sound "DI-RI-RI-RING" and close the battery cover again.










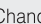


 











 











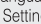











 











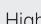



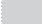
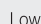



























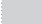
















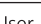
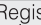












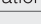


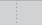
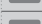








### 22. Safety and Warning

- Do not install the digital door lock in an outdoor environment.
- Do not attempt to disassemble the digital door lock by your self. By doing so, you may get an electronic shock and damage the product.
- Do not use force with a tool onto the product.
- Make sure to lock the door tight when you go out.
- Be careful not to hit the handle as it may cause injuries.
- Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.
- It is recommended to change User Code on a regular basis.
- In manual lock mode, make sure to double check whether the door is securely locked.
- When External Forced lock is set and unlock the door, the alarm will be activated.
- Do not use rechargeable batteries. Only alkaline batteries are recommended.
- Make sure to follow the above instructions to avoid any injuries.
- It cannot be guaranteed in a special conditions & environment such as water condensation, seaside.

### 23. Quick Menu (Master Mode)

Master mode is a mode in which only the administrator can set the door lock and provide access to other users. 30ea user passwords, 40ea card keys, 40ea Fingerprint and individual registration and deletion of one-time passwords enable efficient management of visitors.

Master Code: Change														* Continue /  Complete	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	
Change															
User Code															
Registr-ation															
Delete															
Finger print															
Registr-ation															
Delete															
Card Key															
Registr-ation															
Delete															
Onetime Code															
Registr-ation															
Delete															
Delete All Credentials															
Delete															
DoorLock Setting: Automatic Lock Setting															
Registr-ation															
Delete															

DoorLock Setting: Change mode and New PIN Code registration															
Change Mode															
DoorLock Setting: Language Setting															
Language Setting															
															
															
															
DoorLock Setting: Volume Setting															
High															
Low															
Mute															
Remote Control															
Registr-ation															
Delete															
Controller															
Registr-ation															
Delete															

#### \* Voice guidance function

It provides voice guidance for operation and how to set it up, making it easier and easier to use(When setting up a function, follow the voice guide to prevent incorrect use or input).

\* All registered passwords, card keys, and fingerprints can be deleted at the time of mode change.

\* Please install the network module when using the remote controller or Home network.

### 24. Code