
## 모조지 80g / 184\*260mm

# dormakaba 🚧 Installation Manual Digital Glass door locks can be installed on doors with single or double leaf glass doors. It is suitable for doors that can open and rotate inward or outward and is not 0 suitable for sliding doors. The body is suitable for both left and right open door. Double leaf glass door 1. Slide the door lock into the glass 2. Press the door lock onto the glass 3. Close the door and protrude the door. The keypad should be facing until the whole body of the door dead bolt to check and display the the outside of the room and the height required for striker installalock reaches the alass. side with the battery box facing (If you put water on the glass the inside of the room. surface, you can push it easily.) PTSP3460ONTA REV.01

#### dormakaba


#### Installation Manual

4. Press the striker against the glass until the whole body of the striker touches the glass as shown above.

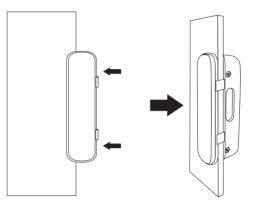


striker are aligned. Adjust the position if necessary.

5. Close the door and make sure that the door lock and

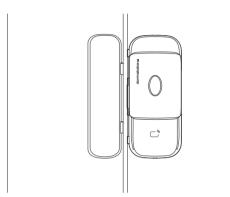

### Single leaf glass door

 1. Slide the door lock into the glass door. The keypad should be facing the outside of the room and the battery box facing the inside of the room.




3. Close the door and protrude the dead bolt to the

Use the following installation paper and mark the position of center hole among the three holes and drill using drill.(14 holes for dead bolts, 12 holes for


height required for the striker.


fixing magnets)

 Press the door lock onto the glass until the whole body of the door lock reaches the glass. (If you put water on the glass, you can push it easily.)

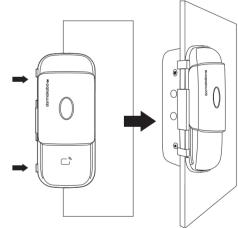

4. Slide the magnet that in the 12 hole.

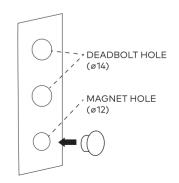

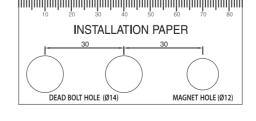

!
CAUTION

Only install on glass doors with the thickness of 12mm.

After installation, insert the batteries while the door is open.