


MP730 / MP750

Password / RFID card / Spare key / Fingerprints (MP750)

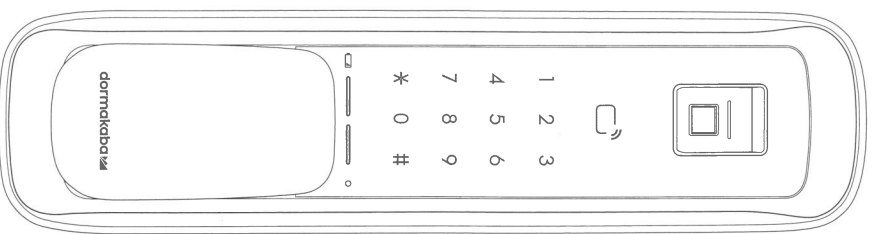

PTMP3030ONTA REV.01

Cautions

- Make sure to read this user manual before using the product.
- For your safety, change the password regularly.
- Do not reverse the poles of the batteries because doing so may cause liquid leakage or rupture.
- When the battery set is discharged, replace all the batteries at the same time.
- Do not mix new batteries with partially discharged or fully discharged batteries.
- Do not install, disassemble, or repair the product by yourself.
- Use a dry, superfine cloth to clean the product.
- Do not press the buttons with sharp objects, such as gimlets or pins, or insert sharp objects into the product.
- Do not use the product for other purposes than digital door lock.
- Be careful not to let water into the product.
- Do not apply a heavy force to the product.
- Keep the product warranty card for A/S service.

Make sure to install the product by an installation engineer. Any product malfunction occurred if it is not installed by designated engineer will cause A/S service charges.

Troubleshooting

Symptom	Solution
The product is not powered on	Check whether the battery set is inserted properly or discharged. Check the battery insertion direction and the pole marks. Replace all the batteries with new ones.
The passwords cannot be registered	Open the battery cover, press "[Register]" button, and retry registering by referring to the password registration method that was specified in the user manual.
The door will not open after inputting the password followed by "*" button	Check if the password entered is correct. The password cannot be registered if the keypad lamp turns off. Therefore, enter the password again after turning on the keypad lamp by touching it with a hand.
The door will not open although the registered information is authorized with a password / RFID card	Use an emergency battery (9 V). It might be a system failure, contact our service center.
Alarm is on and sounds like, "beep beep beep"	This alarm indicates that the battery set should be replaced. Make sure to replace all the batteries with new ones.
The auto lock mode does not work	Try to reset auto lock mode. If the battery set is discharged, you can hear the sound when pressing the buttons, but the product will not work. Therefore, replace all the batteries with new ones.

Product Specifications

Installation condition	Non-fire rated door	Door thickness: 40-75 mm
Opening type	Fingerprint	Up to 100 Fingerprints
	Password	4-12 digits (Up to four passwords may be registered)
	RFID card	Up to 100 RFID cards may be registered.
Rated voltage	DC 6V	LR6 1.5 V AA alkaline battery
Emergency power supply	DC 9V	Alkaline battery (sold separately)
Overheating detection	Temperature sensor	72 ± 5°C (lab environment), 62 ± 5°C (general environment)
Material	Outdoor unit	Al, Zn, ABS
	Indoor unit	Zn, ABS

Enter the registration mode

1. Press [Registered] button
2. Input an administrator password
3. Press [#] button

- Not inputting anything for 10 seconds will cancel the authorization.
- An error will occur if entering less than 6 digits or more than 12 digits password and cancel the authorization.
- When entering an administrator password, press [1] button will reset the entry.
- Press [#] button without any entry or press [Registered] button during authorization will cancel the authorization.

Register password

• Make sure to register a password while the door is open

Change administrator password * Default password: 123456

1. Enter the registration mode
2. Press [0] button
3. Enter a 6 to 12 digit administrator password, and press [#] button

1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #

- Repeat step 3 before the keypad lamp turns off will register another user password. (Up to four passwords can be registered)
- **User password cannot be identical to an existing administrator/guest password.**

Register a user password

1. Enter the registration mode
2. Press [1] button
3. Enter a 4 to 12 digit user password, and press [#] button

1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #

- Repeat step 3 before the keypad lamp turns off will register another user password. (Up to four passwords can be registered)
- **User password cannot be identical to an existing administrator/guest password.**

Register a user password with an address

1. Enter the registration mode, and press [1] button
2. Select and press an address among 1-4, and press [#]
3. Enter a 4 to 12 user password, and press [#] button

1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #

- Repeat step 2 and 3 before the keypad lamp turns off will register another user password. (Up to four passwords can be registered)
- **User password cannot be identical to an existing administrator/guest password.**

Register a guest password

- One-time password

1. Enter the registration mode
2. Press [4] button
3. Input a 4 to 12-digit guest password, and press [#] button

1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #
1 2 3	4 5 6	7 8 9	* 0 #

- **Guest password cannot be identical to an existing administrator/user password.**
- **The guest password will go invalid after using it to open the door.**
- Not inputting anything for 10 seconds will cancel the registration.
- When entering an administrator, a user, or a guest password, press [1] button will reset the entry.
- Press [#] button without any entry or press [Registered] button during authorization will cancel the authorization.

Product Warranty Sheet

Model name	
Serial No.	
Purchase (Installation) date	
Installation service shop name	
Installation engineer name	
Telephone No.	
Address	

- When you request for a repair service, you need to present this warranty sheet, which indicates the purchase date.
- The warranty service for this product will be provided based on the details that were inputted on the product warranty sheet.
- When you purchase this product, have its seller input the purchase date on the product warranty sheet because the free warranty service period starts on the purchase date. The functions and design of this product are subject to changes without notice for the improvement of its performance.

dormakaba services information

Thanks for purchasing dormakaba smart locks. We provide warranty services for our door lock products. To ensure your rights, please read the following clauses carefully.

1. We provide one year free warranty for the door locks bought from our authorized sales channels on used correctly from the date of purchase.
 2. When you buy the product, please ask the seller for invoice and keep it properly.
 3. After installing the lock, please supervise the installation staff to fill out the product warranty card, and the seller will register product information according to the Receipt.
 4. Warranty Card and Invoice are required for warranty.
 5. If you need repair service, please contact the seller or call our service hotline, and our authorized unit will provide repair services.
 6. The above warranty shall not be applied to the following:
 - Warranty period expires.
 - The product model and bar code on the Warranty Card do not match the lock.
 - When the product is damaged by fire, flood, earthquake, etc.
 - The lock is installed by unqualified personnel.
 - The lock is disassembled or modified without permission.
 - Damage is caused by force majeure (earthquake, fire, flood, etc.).
- For more information of the warranty clauses, please refer to our official website or call the local hotline.

www.dormakaba.com

Register a RFID card

• Make sure to register a RFID card while the door is open.

Register an administrator RFID card


1. Enter the registration mode
2. Press [0] button
3. Put the administrator RFID card on the reader



- Repeat step 3 before the keypad lamp turns off will register another administrator RFID card. (Up to 10 RFID cards can be registered)
- **Administrator RFID card cannot be identical to a user RFID card.**

Register an administrator RFID card with an address

1. Enter the registration mode, and press [0] button.
2. Select and press an address from 1 to 10, and press [#]
3. Put the administrator RFID card on the reader



- Repeat step 3 and 3 before the keypad lamp turns off will register another administrator RFID card. (Up to 10 RFID cards can be registered)
- **Administrator RFID card cannot be identical to a user RFID card.**

Register a user RFID card


1. Enter the registration mode
2. Press [2] button
3. Put the user RFID card on the reader



- Repeat step 2 and 3 before the keypad lamp turns off will register another user RFID card. (Up to 100 RFID cards may be registered)
- **User RFID card cannot be identical to an administrator RFID card.**

Register a user RFID card with an address

1. Enter the registration mode, and press [2] button
2. Input an address to be registered (1-100), and press [#] button
3. Put the user RFID card on the reader



- Repeat step 2 and 3 before the keypad lamp turns off will register another user RFID card. (Up to 100 RFID cards may be registered)
- **User RFID card cannot be identical to an administrator RFID card.**

- Not inputting anything for 10 seconds will cancel the registration.
- Press [#] button without any entry or press [Registered] button during authorization will cancel the authorization.

BLE registration method

1. Download app (search by dormakaba smartlock)

GOOGLE




iPhone



2. Enter the [1] button after running the App
 3. Enter information and enter [Start Binding] button
 4. Enter the [Registration] button after confirming the door lock LED blinks
- You can register up to 10 smartphones.

Part names

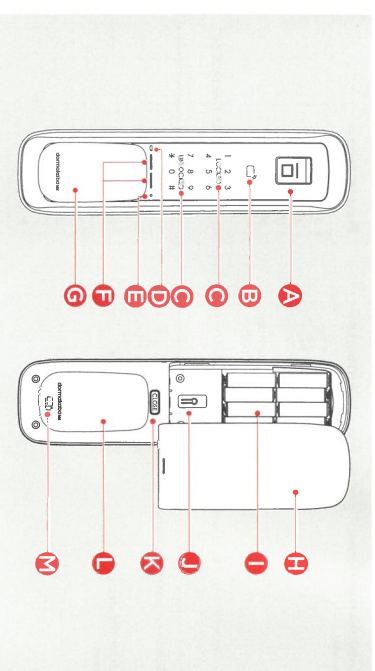

Outdoor unit

- A** Fingerprint sensor (MP750)
- B** RFID card reader
- C** Status display lamp
- D** Battery warning lamp
- E** [Reset] button
- F** Emergency power supply terminal
- G** Outdoor handle
- H** Battery cover

Indoor unit

- I** Battery
- J** [Register] button
- K** [CLOSE] button
- L** Indoor handle
- M** Blocking indoor handle

Components

The components are subject to changes depends on the installation environment.

- Mortise
- Mortise shaft
- Striker
- Screw
- Battery
- RFID card
- Remote control (sold separately)
- Interlock device (sold separately)
- User manual
- Installation manual
- Installation paper pattern

