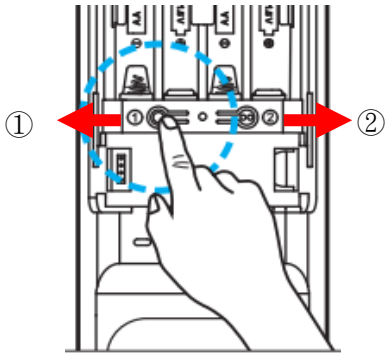

鎖機身示範圖

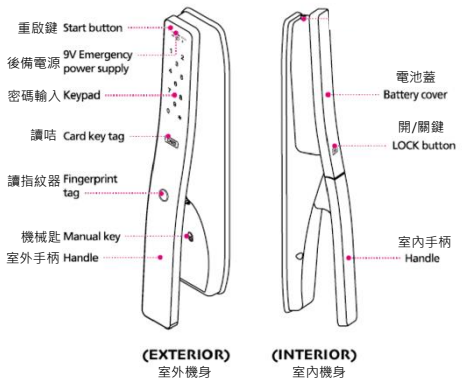

設置密碼 Password Setting (Factory Code: 1234 / 1234567890)

登記 Register ① **PIN (3-12 Digit Number** 位數字密碼) * ①

設置咭 Card Setting （Up to 50pcs）

登記 Register ② 1 CARD ②

刪除全部 Delete All cards ② 7 * **(按住 3 秒 Press and hold 3 seconds)**

設置指紋 Fingerprint Setting（Up to 100pcs）

登記 Register ② 3。 Ea. x 8 ②

刪除全部 Delete All cards ② 9 * **(按住* 3 秒 Press and hold * 3 seconds)**

自動關門/手動關門設定 Auto Lock/Manual Lock Setting

自動上鎖 Auto Lock: 1 3 的〝嗶〝聲 (long beep sound)

手動上鎖 Manual Lock: 1 的〝嗶〝聲 (short beep sound)

- 如設置手動上鎖，關門後 – 室內按 Close 鍵上鎖，室外按 Start 鍵上鎖
- Under Manual Lock mode, close the door and please lock by pressing indoor "Open/Close" button or place your palm on numeric pad 2 seconds)

雙重認證設置 Double Authorisation Setting

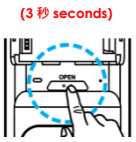

3

自動上鎖時間設定 Auto Lock Time Setting

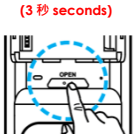

8 按 1 – 8 設定時間(秒)
Enter number button 1-8 to set time (Seconds) *

音量設置 High/Low Volume Setting

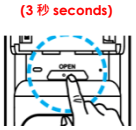

9 7 種聲量 Level of Volume *

CRG 版權所有

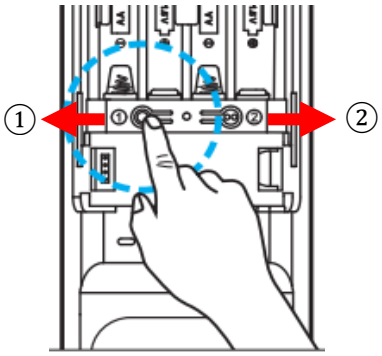

鎖機身示範圖

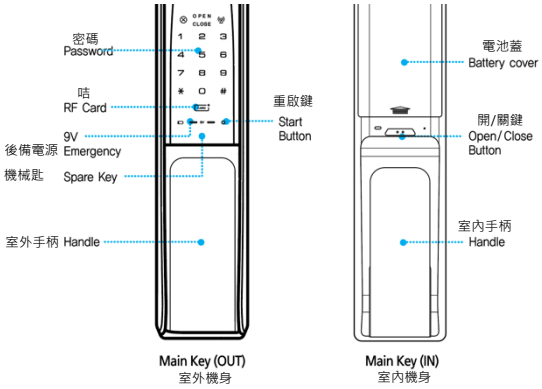

室外鎖定設定 External Force Lock Setting

(3 秒 seconds)



如啟動此設定，室外電子輸入將被鎖上，除了匙可解鎖。
室內解鎖一次後需從新設定。
Once activate this setting, only mechanical key can unlock from outdoor.
Unlock from indoor once will deactivate this setting.

惡作劇防止功能 Mischief Prevention Function

當惡作劇了 3 次就不允許使用
Not allowed to access the system in the event of mischief 3 time or more

電池更換指示 Battery Replacement Indication

在電池不足的情況下,會播歌
It will play the music if batteries are running low.

室外解鎖 Unlock from Outdoor

1)	已登記密碼 *	Registered PIN *
2)	拍已登記咭	Registered Card
3)	已登記指紋	Registered Fingerprint
4)	機械匙	Mechanical Key

CRG 版權所有

虛擬密碼設定 Fake Code Setting

啟動 Activate:

關閉 Deactivate:

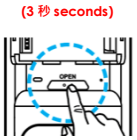

2

長的 ` 嗶 ` 聲 (long beep sound)

短的 ` 嗶 ` 聲 (short beep sound)

- 如設置虛擬密碼：假密碼 密碼 * 解鎖 或 密碼 假密碼 * 解鎖
- If activate Fake Code Setting, can be unlock by
  Fake PIN PIN * OR PIN Fake PIN *

開門警報設定 Door Open Alert Setting

旅行模式鎖定 How to Lock the Indoor Open/Close Button

手放在鍵盤上 LED 閃 3 次

Put your hand on the keypad, LED will blink 3 times

CRG 版權所有